

PRINTER COMMANDS	PRINTERS						
FUNCTIONS	Epson TM88 or Compatible	Samsung BIXOLON SRP-275 (40 Columns)	Star Printer	OPOS Printer*	Citizen iDP3541 impact printer	TRST-A10 Buzzer	Epson TM-U220 Printer
Align Centre	\1B\61\01	\1B\61\01\1B\4D\01	\1B\1D\61\01	\1B\7C\63\41			
Align Left	\1B\61\00	\1B\61\00\1B\4D\01	\1B\1D\61\00	\1B\7C\4E			
Align Right	\1B\61\02	\1B\61\02\1B\4D\01	\1B\1D\61\02	\1B\7C\72\41			
Barcode Prefix (Code 39)	\1D\6B\04\2A or \1D\6B\04		\1B\62\34\31\31\39				
Barcode Suffix (Code 39)	\2A\00 or \00		\1E				
Bold	\1B\45\01	\1B\45\01\1B\4D\01		\1B\7C\62\43			
Font B Command Set							\1B\21\01**
Colour Off	\1B\72\00	\1B\72\00\1B\4D\01	\1B\35	\1B\7C\4E			
Colour On	\1B\72\01	\1B\72\01\1B\4D\01	\1B\34	\1B\7C\72\43			
Double Height	\1B\21\10	\1B\21\10\1B\4D\01	\1B\0E	\1B\7C\33\43			
Double Width	\1B\21\20	\1B\21\20\1B\4D\01	\0E	\1B\7C\32\43	\0E		
Full Cut	\1D\56\00	\1D\56\00\1B\4D\01	\1B\64\01	\1B\7C\31\66\50	\1B\50\00		
Italic	\1B\34\01	\1B\34\01\1B\4D\01		\1B\7C\69\43			
Large Text - (Size 42)	\1D\21\42						
Normal Print	\1B\21\00	\1B\21\00\1B\4D\01\1B\72\00	\1B\40	\1B\7C\4E	\0F		
Open Cash Drawer (Installed in Cash Drawer Menu)	\1B\70\30\3C\78\00				\07		
Partial Cut	\1D\56\01	\1D\56\01\1B\4D\01	\1B\64\01	\1B\7C\31\66\50	\1B\50\01		
Print Logo (Logo 1 in printer)	\1C\70\01\00	\1C\70\01\00	\1B\1C\70\01\00	\1B\7C\31\42			
Print Logo (Logo 2 in printer)	\1C\70\02\00	\1C\70\02\00	\1B\1C\70\01\00	\1B\7C\32\42			
Print Logo (Logo 3 in printer)	\1C\70\03\00	\1C\70\03\00	\1B\1C\70\01\00	\1B\7C\33\42			
Print Logo (Logo 4 in printer)	\1C\70\04\00	\1C\70\04\00	\1B\1C\70\01\00	\1B\7C\34\42			
Print Logo (Logo 5 in printer)	\1C\70\05\00	\1C\70\05\00	\1B\1C\70\01\00	\1B\7C\35\42			
Print Logo (Logo 6 in printer)	\1C\70\05\00	\1C\70\05\00	\1B\1C\70\01\00	\1B\7C\36\42			
Red Print		\1B\72\01\1B\4D\01		\1B\7C\72\43	\13		
Reverse Print Off	\1D\42\00	\1D\42\00\1B\4D\01					
Reverse Print On	\1D\42\01	\1D\42\01\1B\4D\01					
Send an Audible tone to printer						\1B\07	

* The above OPOS commands are default commands and may not work with all printers.

** Character font B selected. This is added to the beginning of each line to select the Font B Selection and stop the text from wrapping around on the next line.